


+5V JP1 RESET JP2 Masse 12V JP3 -12V JP4 +12V JP5 PERI JP6 GND JP7 A17 JP13 A16 JP12

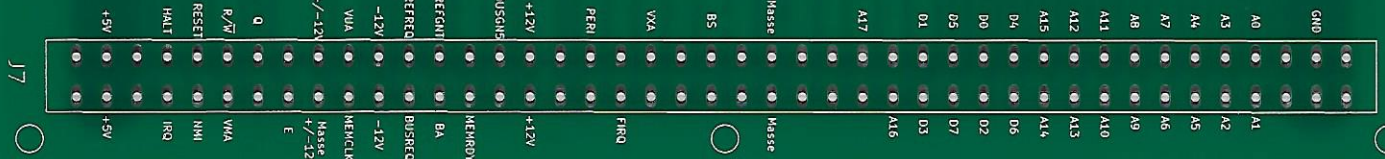

GND A0 A1 A2 A3 A4 A5 A6 A7 A8 A9 A10 A11 A12 A13 A14 A15 A16 A17
Masse BS VXA PERI FIRQ
+12V +12V
BUSREQ MENRDV
REFONT BA
REFREQ DBSRQ
-12V -12V
VXA MENCCLK
Masse +/-12V Masse +/-12V
E
Q R/W VXA
RESET NM
HALT IRQ
+5V +5V

